



CROWN ELECTRONIC LOCK

Instruction Manual

■ How to Open at First Time?

The default code set at the factory is *****, **1,2,3**, and **#** in sequence.

1. Press the ***** key first. (The **red** lamp turns on and it beeps [🔊]).)
2. Press numbers, **1,2,3** (The lock beeps [🔊] with the **red** lamp on.)
3. Press the **#** key. (The **green** lamp turns on.)
4. Turn safe's handle to open position. Door Opens.

■ How to Close?

1. Close the door.
2. Turn handle to closed position.
3. Press **#**.
4. **Turn** the handle **right and left** to make sure that the door is locked.

(When the lock does not open after the opening procedure, it beeps [🔊] a few times repeatedly for 10 seconds.)

■ How to Change Your Code?

1. Press the Change switch located at the back of the door? (The **green** lamp turns on and lock beeps [🔊]).)
2. Press the *****.
3. Press New Code. (up to 15 digits)
4. Press the **#**. (If you hear three beeps [🔊], the New Code is set successfully.)
5. Make a test with the **Door Open**. Lock and unlock the bolts using the New Code.
(In case of a problem repeat procedure from step 1.)

■ Alert and Malfunction

1. If a wrong code is pressed, it beeps [🔊] repeatedly and the **red** lamp turns on.
2. If the wrong code is pressed 3 times or more, all operations are stopped for three minutes.

(Press the correct code when it beeps after 3 minutes, and the lock operates properly.)

■ Battery Replacement

- Blinking **green** lamp when pressing the ***** key indicates that the battery is running low.
- Replace **1.5V (Alkaline) x 4** batteries with new ones.